


Installation guide

SHORT CHAIN KEEPER

for single chainring.

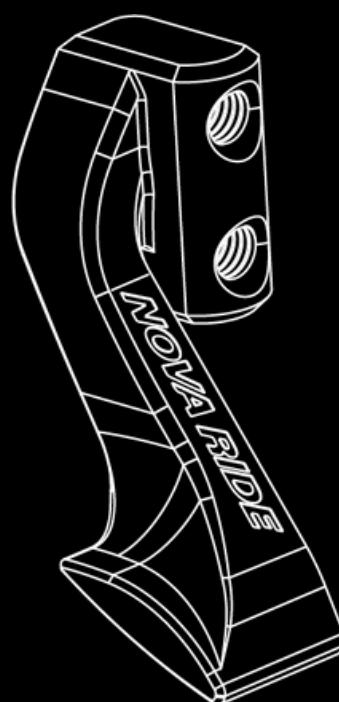


WHAT'S NEEDED FOR INSTALLATION

1. The Braze-On Front Derailleur Mount from your bicycle frame manufacturer.
2. 3mm Hex Allen Key.
3. Torque Wrench.



INSTALLATION

1. Short Nova Ride chain keeper.
2. Washer.
3. Black titanium screw.

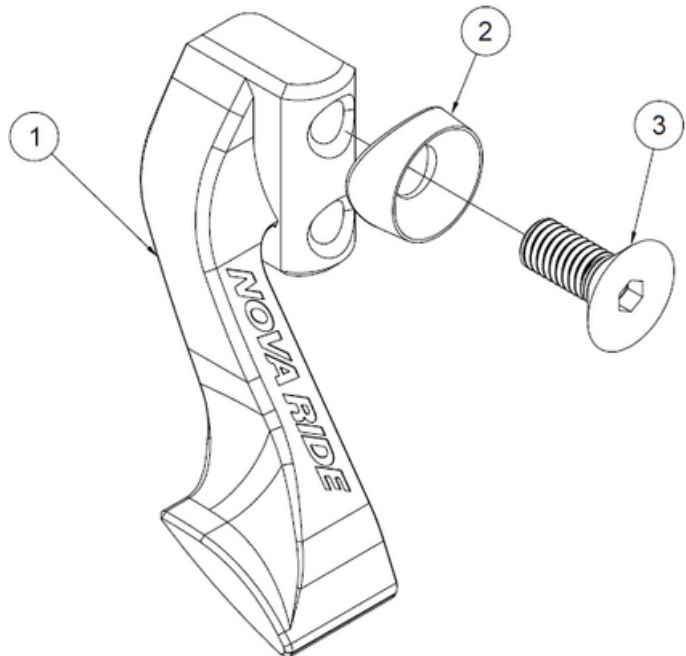

INSTALLATION STEP BY STEP

1. Place the chain on the largest sprocket of the cassette.



2. Attach the chain keeper to the "Braze On" type derailleur hanger mount using the screw and washer.


Tighten the screw so that the chain keeper can be adjusted for height.



3. **Adjust the height.**

The gap between the chain and the bottom of the chain keeper should be 2 mm.

To do this, position the chain keeper on the chain at the chainring and position the chain keeper so that it makes contact with the guide.

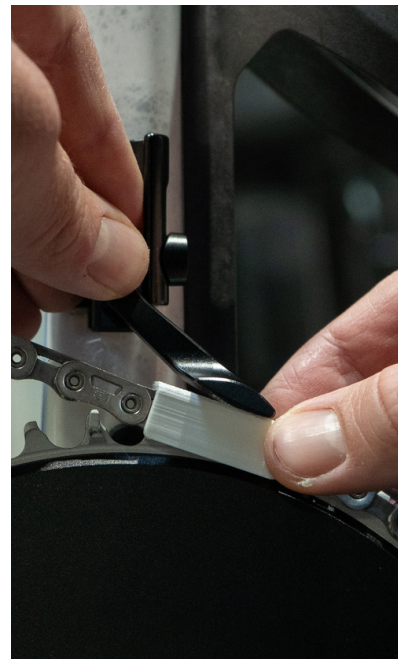

4. Once correctly adjusted, tighten the chain keeper screw to 6 N.m using a torque wrench.



5. Check that the chain keeper is not rubbing on all the cassette sprockets.

If necessary, return to step 3.



6. You are now ready to enjoy no more front chain drops.



A close-up, low-angle shot of a bicycle's front chain and crankset. The chain is black and runs over a silver-colored crank arm. The crank arm has "NOVA RIDE" printed on it in white. The background is a blurred green field, suggesting an outdoor setting. The lighting is bright, creating strong highlights and shadows.

NO MORE
**FRONT CHAIN
DROPS.**

www.novatoride.com

2026 © Nova Ride. All rights reserved.