




Installation Guide

NRC DERAILLEUR HANGER UDH

for Sram.

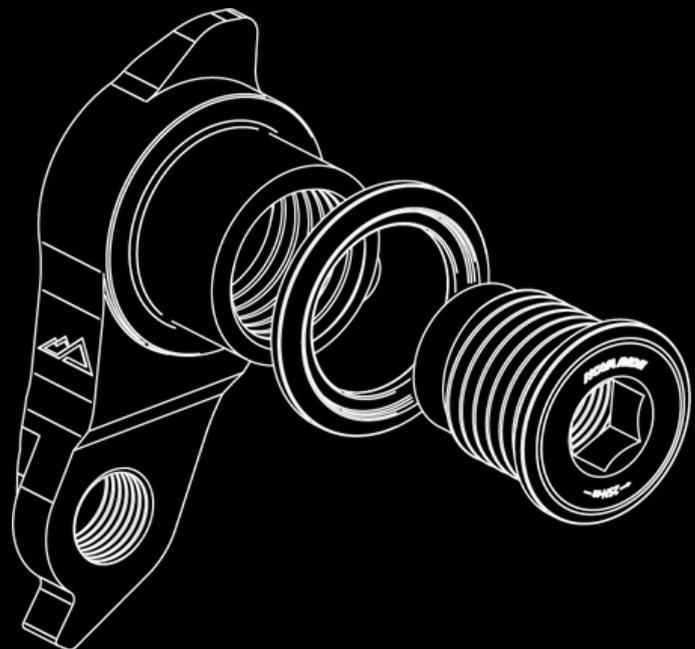

WHAT IS NEEDED FOR THE INSTALLATION

1. Nova Ride derailleur hanger.
2. 5mm and 8mm hex Allen keys.
3. Torque wrench.




COMPATIBILITIES

BRAND	SPEED	REAR DERAILLEUR REFERENCE
Sram	12	Rival AXS (D1 / E1) Force AXS (D1 / D2 / E1) RED AXS (D1 / E1)
		Rival XPLR AXS Force XPLR AXS RED XPLR AXS
		GX / X01 / XX1 Eagle Drivetrain
Shimano	12	GRX 822, GRX 827
		Deore M6250 Deore XT M8250 XTR M9250


STEP-BY-STEP INSTALLATION

1. Shift the rear derailleur to the smallest sprocket.

Remove the rear wheel from your bike.

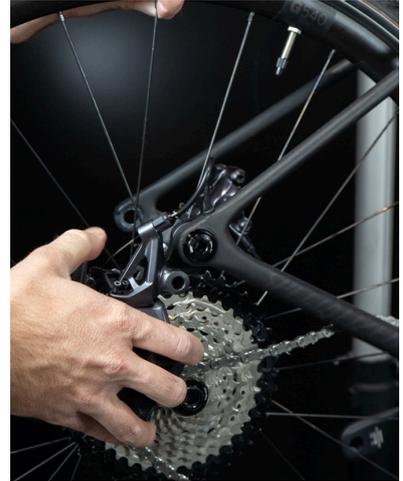


2. Unscrew the rear derailleur using a 5mm hex Allen key.

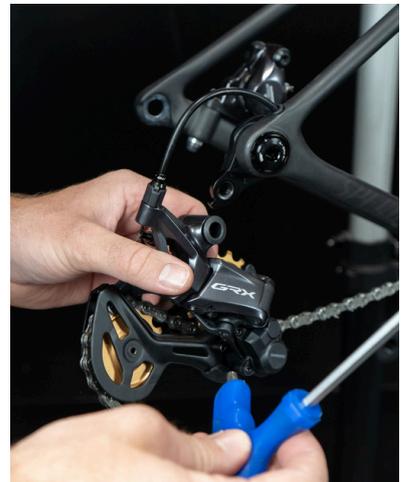

3. Remove the existing derailleur hanger using an 8mm Allen key.


Then clean the mounting area.

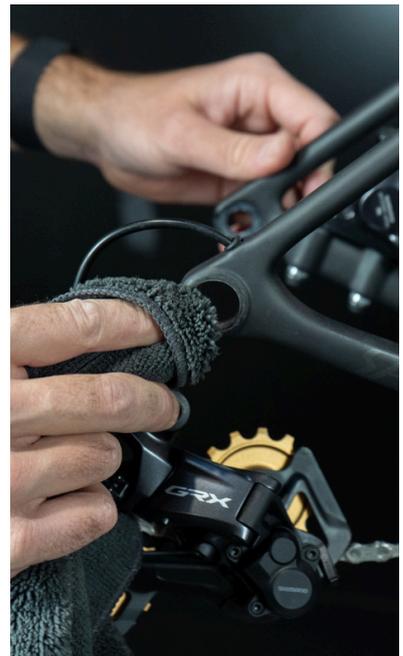

4. Install your new Nova Ride derailleur hanger by positioning it in the stop position.





5. Tighten the screw counterclockwise to a torque of 25 N.m using a torque wrench.

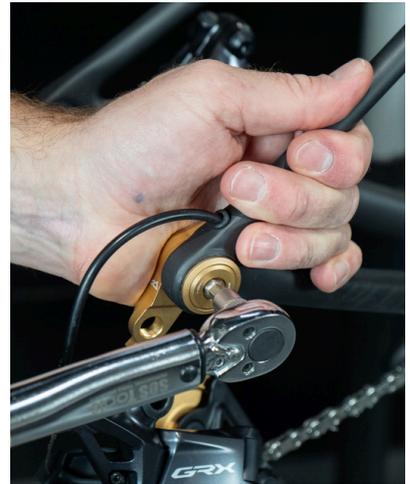

6. Install the derailleur onto the Nova Ride derailleur hanger using a 5mm Allen key.

Tighten the derailleur bolt to a torque of 10 N.m using a torque wrench.

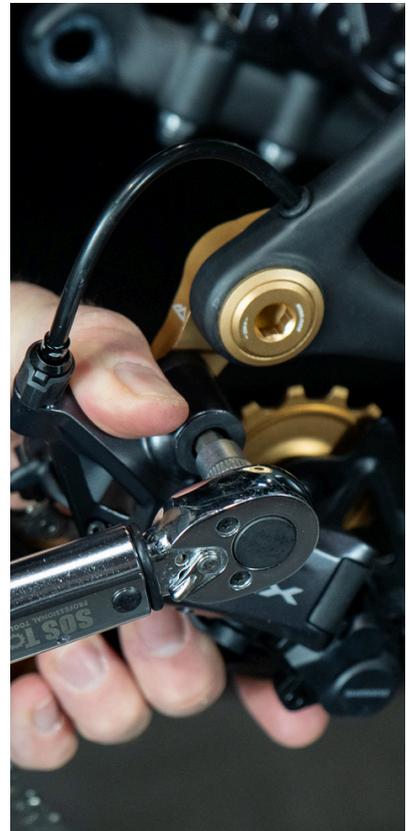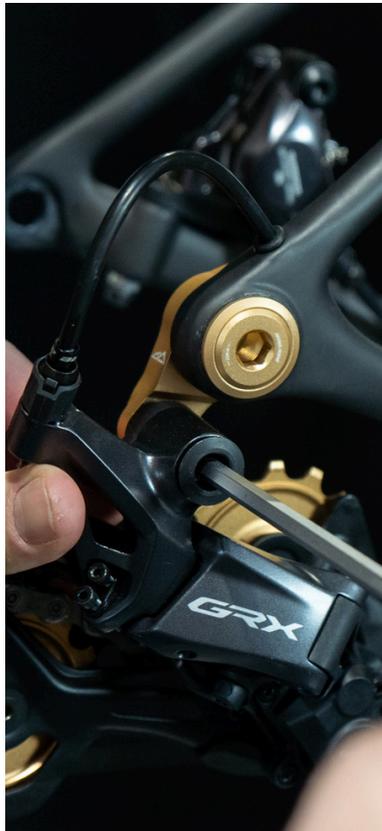

7. Reattach the rear wheel to the bike.



8. Check the derailleur limit screw adjustment.

Check the derailleur cage adjustment.

Check the derailleur indexing and gear shifting.

Adjust if necessary.

